




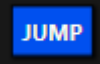




ArgoNavis Decoder Installation and User Guide

Version 10.0.12.x

Introduction	4
Special Notes on the Touch Screen	4
Physical Connections	4
Decoder Pro Model Rear Panel label.....	4
Decoder Pro Model Connection Diagram.....	5
Decoder Pro Model Connector Table	5
Decoder Pro Model Breakout Cable Pinout.....	6
Decoder SDI Model Rear Panel Label	7
Decoder SDI Model Connection Diagram	7
Decoder SDI Model Connector Table	7
Decoder Analog and HDMI Model Rear Panel Label	8
Decoder Analog and HDMI Model Connection Diagram	8
Decoder Analog and HDMI Model Connector Table	8
System Specifications.....	9
ArgoNavis Operations	10
Launching the Application.....	10
Some Basic Settings	11
Configuring the Output Resolution.....	11
Playlist Operations	12
Add a Clip to the Playlist	12
Creating a Playlist.....	13
Saving a Playlist.....	13
Clearing the Listview	13
Recalling a Saved Playlist	13
Decoder Controls and Keyboard Shortcuts	14
Stop 	14
Play / Pause  	14
Frame Advance 	14
Frame Reverse 	14
Track Bar	14
Jump 	15
Local Audio Rendering	15
Special Controls.....	16
Audio Display Window	16
Alarm Details Window	17
File Information/Parse	19
Closed Captioning Display Window	20
Playback Properties and Graphics Overlay Settings	21

608 Captioning Overlay.....	21
708 Captioning Overlay.....	22
Video Background Color	22
Action\Title Safe Area Overlay.....	22
Timecode Overlay	22
Use 1080P not 1080PsF	22
Use Alternate SD MPEG Decoder	23
Deinterlacing Mode HD.....	23
Enforce Field Ordering for HD Source.....	23
Deinterlacing Mode SD	23
Enforce Field Ordering for SD Source	24
Enable VANC Insertion	24
Use Drop Frame for Timecodes	24
Use GOP Header Time Code on location bar	24
AC3 Bitstream Out Enabled	24
Disable .info Files	25
Append .SLT Files if Available.....	25
Duration Between Clips	25
Enable LKFS Checks in the Playlist	25
Clear All Values When Media Starts	26
Exclude LKFS Measurement on Silence	26
Reset Integrated Value on Silence	26
Exiting the Application	27

Introduction

Vela Research is pleased to introduce the ArgoNavis Decoding System. The ArgoNavis provides advanced, multiformat decoding and playback capabilities supporting MPEG-2, h.264 (AVC) and other video compression technologies contained within many different multiplexed containers, such as MPEG-2 TS, MPEG-2 PS, MP4 and QT formats.

Special Notes on the Touch Screen

If equipped with a Touch Screen, after unit power up, please allow several seconds for the Touch Screen drivers to load prior to 'touching' the Touch Screen.

The Touch Screen is controlled via USB. Included with the Touch Screen is a USB cable. Connect the USB cable from the Touch Screen to any available USB connector on the ArgoNavis unit.


Physical Connections

Note that the ArgoNavis platform can be configured as an encoder or decoder and the inputs and outputs will be enabled/disabled based upon the configuration of the unit. For example, an encoder only unit will have only the inputs enabled. Likewise, the decoder only configuration will have only the outputs enabled.


The ArgoNavis system comes in three different input/output configurations:

Decoder Pro Model Rear Panel label

4000-xxxx-3 ArgoNavis Decoder Pro

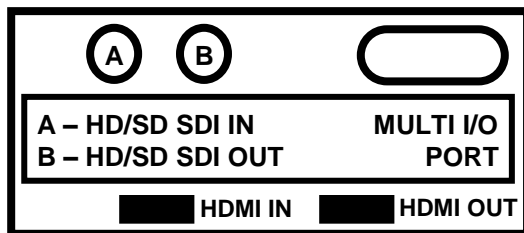

Decoder Pro Model Connection Diagram

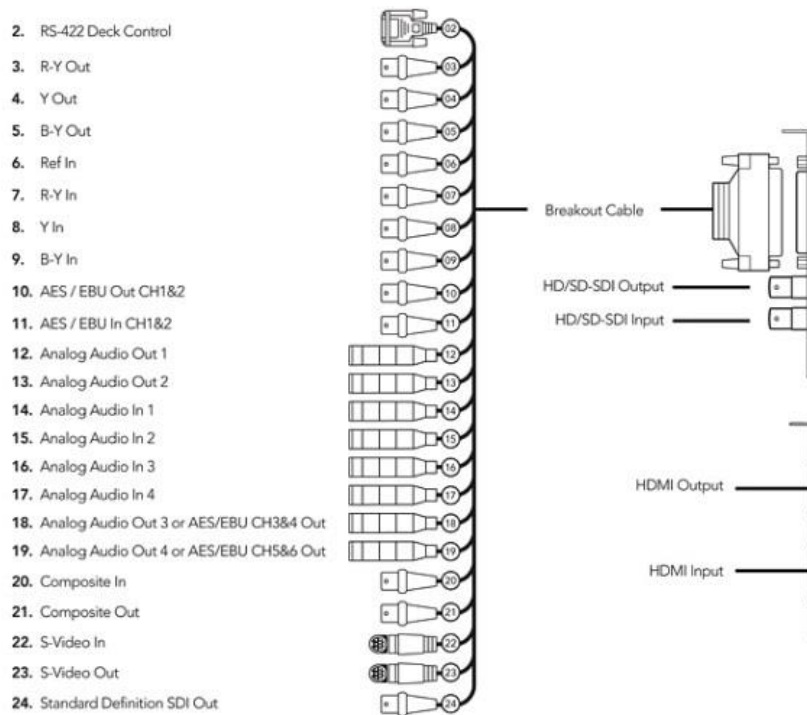

Decoder Pro Model Connector Table



Connectors	
SDI Video Output	HD/SD Switchable 75 ohm BNC
Component Video Output	Y, Pb, Pr on 3 BNC
Composite Video Output	BNC
S-Video Output	S-Video Connector
HDMI Video Output	HDMI type A Connector
Analog Audio Output	4 Channels via 1/4" jack connectors. Jack connector is TRS (Tip, Ring, Sleeve) Balanced 110 ohm at +4 dBm reference level.
AES/EBU Audio Output	2 Channels Unbalanced 75 ohm BNC
SDI Audio Output	8 Channels Embedded in HD or SD
HDMI Audio Output	2 Channels Embedded in HD or SD
Sync Input	75 ohm BNC. Blackburst in PAL and NTSC formats or Tri Level Sync in any format.
Device Control	Sony compatible RS422 deck control.

Decoder Pro Model Breakout Cable Pinout.

Breakout pin	Label	Tail end
1	RS422 pin 1	2
2	RS422 pin 8	2
3	Audio Out CH4/AES 5&6 Tip	19
4	Audio Out CH4/AES 5&6 Ring	19
5	Audio Out CH1 Tip	12
6	Audio Out CH1 Ring	12
7	Audio In CH4 Tip	17
8	Audio In CH2 Tip	15
9	GROUND	1
10	REF In (+)	6
11	R-y out (+)	3
12	y out (+)	4
13	B-y out (+)	5
14	S-Video In (3)	23
15	S-Video In (4)	23
16	SD-SDI Out (+)	24
17	RS422 pin 3	2
18	RS422 pin 7	2
19	GROUND (Tail End 18,19)	19
20	GROUND	1
21	Audio Out CH2 Tip	13
22	Audio In CH4 Ring	17
23	Audio In CH2 Ring	15
24	Audio In CH1 Tip	14
25	composite in (+)	20
26	GROUND	1
27	GROUND	1
28	GROUND	1
29	GROUND	1
30	Composite Out (+)	21
31	RS422 pin 2	2
32	AES/EBU In CH1 & 2	11
33	AES/EBU Out CH1 & 2	10
34	Audio Out CH3/AES 3&4 Tip	18
35	Audio Out CH3/AES 3&4 Ring	18
36	Audio Out CH2 Ring	13
37	Audio In CH3 Tip	16
38	Audio In CH3 Ring	16
39	Audio In CH1 Ring	14
40	R-y in (+)	7
41	y out (+)	8
42	B-y in (+)	9
43	S-Video out (3)	22
44	S-Video out (4)	22
Sleeve	GROUND	1

Decoder SDI Model Rear Panel Label


4000-xxxx-2 ArgoNavis Encoder HD/SD SDI

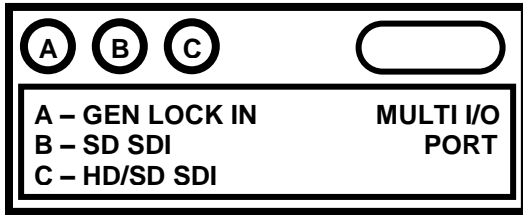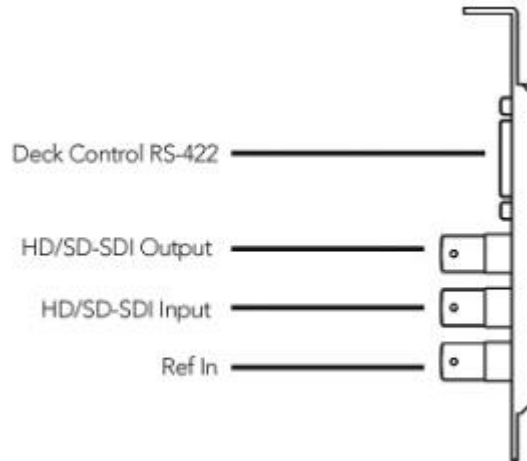***Decoder SDI Model Connection Diagram******Decoder SDI Model Connector Table***


Connectors	
SDI Video Output	HD/SD Switchable 75 ohm BNC
Sync Input	75 ohm BNC. Blackburst in PAL and NTSC formats or Tri Level Sync in any format. Not Used on the Encoder.
Device Control	Sony compatible RS422 deck control.

Decoder Analog and HDMI Model Rear Panel Label

4000-xxxx-1 ArgoNavis Encoder Analog and HDMI

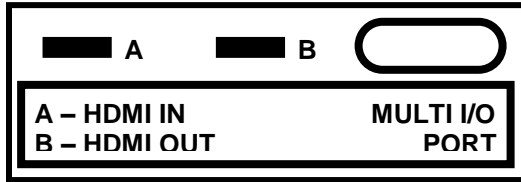

Decoder Analog and HDMI Model Connection Diagram

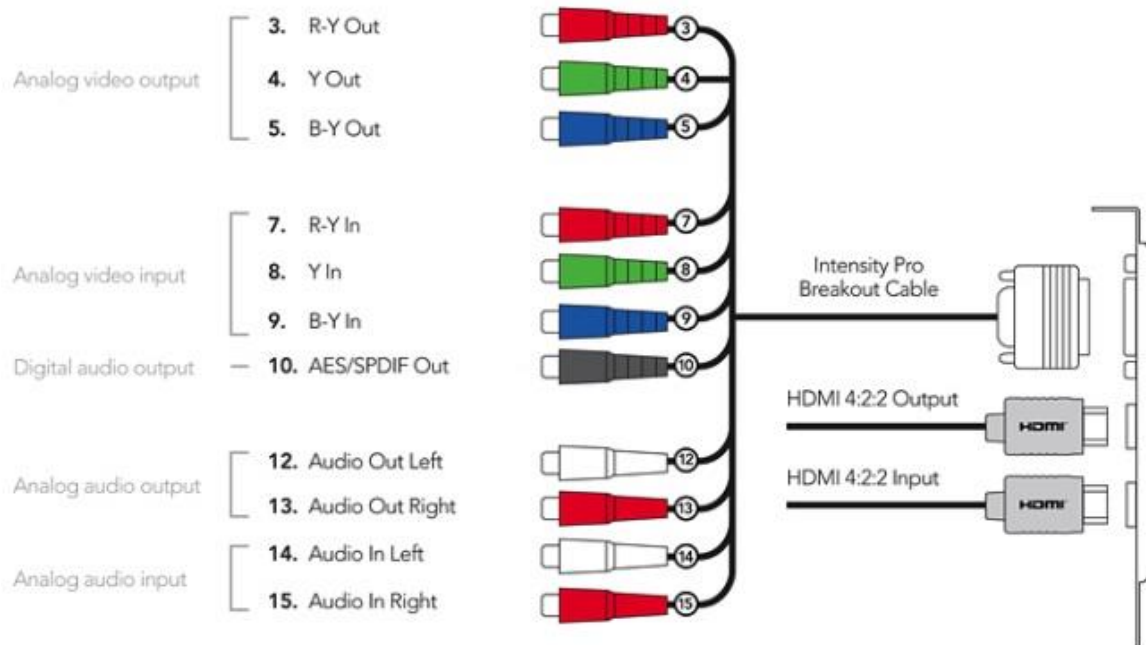

Decoder Analog and HDMI Model Connector Table

Connectors	
Component Video Output	3 x RCA Connector
Composite Video Output	1 x RCA Connector
Analog Audio Output	2 x Unbalanced RCA Connector. 1 Stereo Pair
HDMI Video Output	1 x HDMI Type A Connector
HDMI Audio	2 Channels Embedded in HDMI

System Specifications

Chassis

Model: 4000-2187-x (1.5 U Rackmount)

Dimensions: (WxHxD) 16.8 x 2.6 x 13 in. (427 x 66 x 330 mm)

Weight

Gross Weight: 19.6 lbs. (8.9 kg.)

System Input Requirements

AC Input Voltage: 100-240V AC auto-range, 5A, 50 – 60 Hz

Power Supply

Rated Output Power: 220W

Rated Output Voltages: +3.3V (0 to 10A), +5V (12A), +12V (16A), -12V (0.3A), +5Vsb (0 to 2A), +5V and +3V total 80W max.

Operating Environment

Operating Temperature: 10° to 35° C (50° to 95° F)

Non-operating Temperature: -40° to 70° C (-40° to 158° F)

Operating Relative Humidity: 8% to 90% (non-condensing)

Non-operating Relative Humidity: 5 to 95% (non-condensing)

Drive Bays

2 x 3.5" Internal SATA drive bays

Note: The following items are subject to change based on configuration, part availability/obsolescence, and technological advances.

Motherboard

MSI Model: H67MA-E35

Supports LGA1155 processors

Supports RAID 0, 1, 5, 10 on MotherBoard

Processor (s)

1 Intel i5 2400 3.1 GHz Quad Core Processor (can be upgraded)

HDD

1 x 2 TB 3.5" 7200 RPM SATA (can be upgraded)


OS

Windows 7 Professional 32 Bit


ArgoNavis Operations

Launching the Application

The application can be launched from the Vela Toolbar (shown below) which will launch automatically at startup and be positioned on the right hand side of the desktop.

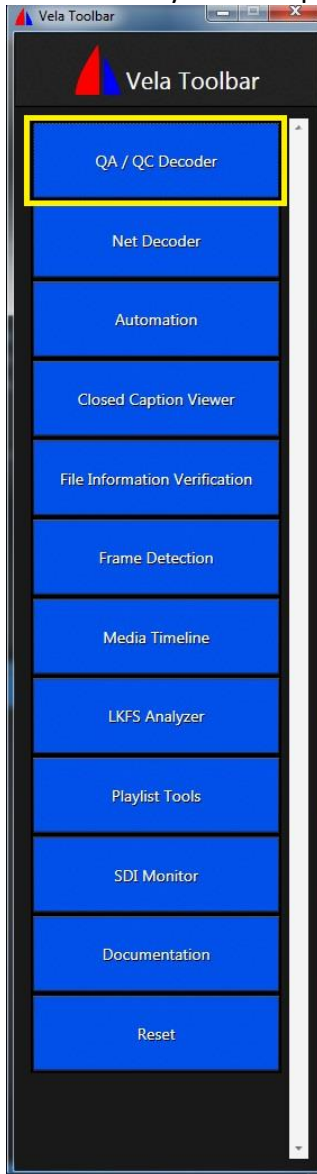

Or the application can be launched from the Windows Start menu by selecting the start


icon , then select 'All Programs', 'Vela Research', 'ArgoNavis', 'ArgoNavis Decoder'.

Some Basic Settings

Configuring the Output Resolution

By default the Output Resolution is set to Auto-Scale mode. In Auto-Scale mode the output resolution is automatically set to the native resolution of the file being played back.

If you wish to take the unit out of Auto-Scale mode, select the Output Resolution drop down menu and 'uncheck' Auto-Scale. Then select the Output Resolution you desire.

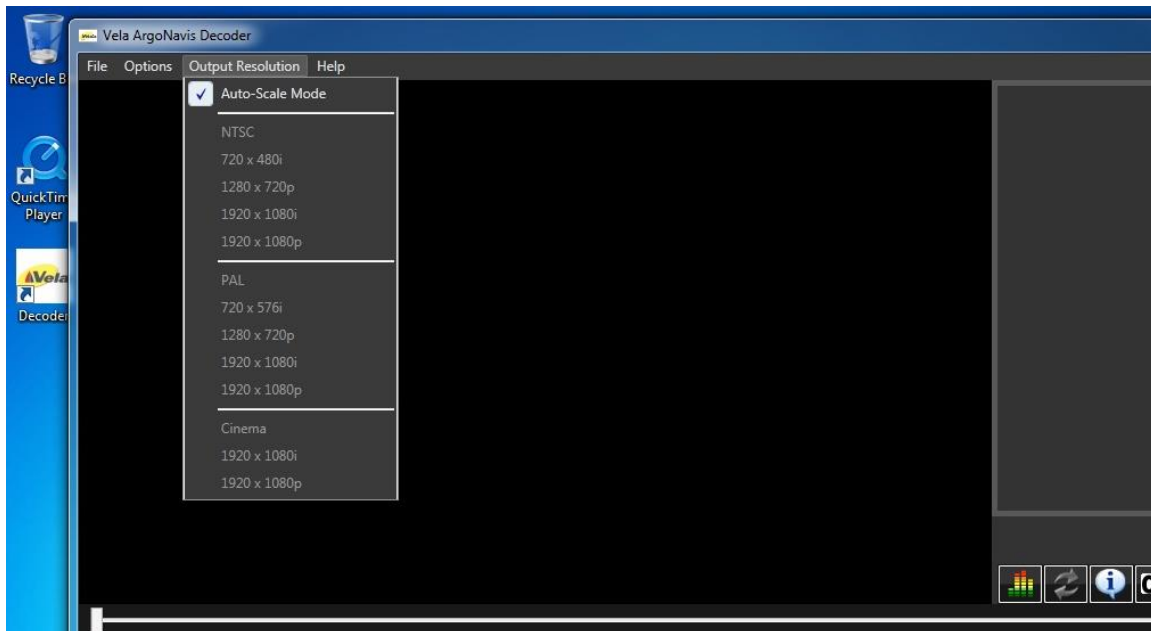

When in any resolution other than Auto-Scale the output resolution of the decoder is constant regardless of the resolution of the file being played back. For example if the 'Output Resolution' is set to 1920 x 1080i then any file played back will be output as 1920 x 1080i.

Auto-Scale On

File Resolution	Output Resolution
1920x1080i	1920x1080i
720x480i	720x480i

Auto-Scale Off with Resolution set to 1920 x 1080i

File Resolution	Output Resolution
1920x1080i	1920x1080i
720x480i	1920x1080i

Playlist Operations

Add a Clip to the Playlist



1. Select one of the 'Browse' buttons (see above) and browse for the file.
2. Once in the 'Browse' window the file can be added using the 'Open' button or individual or multiple files can be 'dragged and dropped' into the playlist.
3. Repeat steps 1 and 2 as necessary.
4. Keyboard Shortcut to load a clip: CTRL + L
5. Keyboard Shortcut to unload a clip: CTRL + U

Creating a Playlist



Playlist Controls from left to right are:

Load List

Save Playlist

Clear Playlist

Remove Clip from Playlist

1. Select the 'Add Clip' button to add clips to the Playlist
2. The file browser will allow you to select multiple clips at once for import into the playlist.
3. Once imported clips can be repositioned within the list by dragging them up or down the list.
4. To remove a clip highlight one or multiple clips and select 'Remove Clip'.

Saving a Playlist

1. Select the 'Save List' button
2. A file save browser will open. Save the playlist file.
3. Playlist files are saved in an XML format. We recommend that you do not use spaces in playlist file names. Use underscores where spaces would be. For example instead of List 1.xml, use List_1.xml.
4. Playlist files can be edited outside of PlayAdvantage using a simple text editor such as notepad.


Clearing the Listview

1. Individual Clips can be removed from the playlist listview using the 'Remove Clip' button.
2. The entire playlist listview can be cleared using the 'Clear List' button.

Recalling a Saved Playlist

1. Select 'Load List'
2. Browse for and open the saved playlist.
3. Once loaded the list can be played or modified.

Decoder Controls and Keyboard Shortcuts

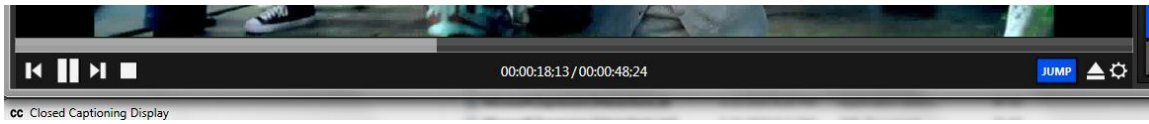

Stop

1. Stops decoder Playback.

Play / Pause

1. Initiates playback.
2. When playing, Pauses playback
3. Keyboard Shortcut: Space bar

Frame Advance

1. Advances the clip one frame.
2. Keyboard Shortcut: Right Arrow

Frame Reverse


1. Rewinds the clip one frame.
2. Keyboard Shortcut: Left Arrow

Track Bar

1. Allows you to quickly jump/move around within the file.
2. Displays the current position of playback.
3. Displays the current Timecode and the total duration of the file.

Jump


Allows you to jump to a particular timecode within the file.

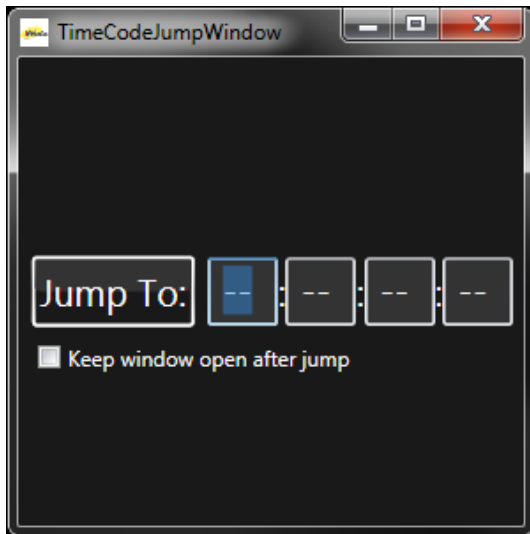

1. Click 'JUMP' to open the jump menu (or Keyboard Shortcut: CTRL+J)
2. Input a valid timecode in HH:MM:SS:FF format
3. Click 'Jump To:' to execute the jump (or Keyboard Shortcut: Enter)
4. Click 'JUMP' to close the jump menu

Keep window open after jump: If checked the Jump window will remain open after the jump has been executed. If unchecked the window will automatically close on jump.

Local Audio Rendering

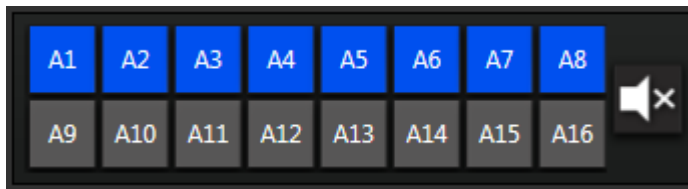

The Local Audio Rendering allows you to select from up to eight (8) audio channels and render the audio to local speakers (computer speakers) connected to the PC or an HDMI monitor connected to the PC portion of the system. Select the channel(s) you wish to hear by clicking on Ax.

Note that since the computer system or HDMI typically has only two speakers all of the channels are downmixed in the following order:


A1	A2	A3	A4	A5	A6	A7	A8
Left	Right	Left	Right	Left	Right	Left	Right

Special Controls



CC:	Opens the CC decode window (this window is opened by default on app launch)
LED:	Opens the Alarm Details window (this window is opened by default on app launch)
Loop:	Loops the file
Info:	Opens the File Information/Parse window (this window is opened by default on app launch)


Audio Display Window

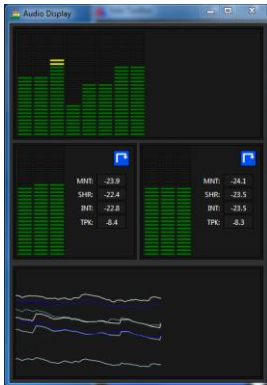

The Audio Display Window contains the following elements:

1. Amplitude for each of up to eight channels
2. LKFS for each of two logical audio streams (up to six channels per stream)
 - a. MNT: The instantaneous/momentary LKFS measurement
 - b. SHR: The short term average measurement (3 second average per EBU spec)
 - c. INT: The realtime integrated measurement. If the clip is played through completely this value will be the integrated measurement for the entire clip.
 - d. True Peak: The peak measurement obtained from all channels with a logical audio stream.
3. Graph of Audio Amplitude for each channel over time

Alarm Details Window

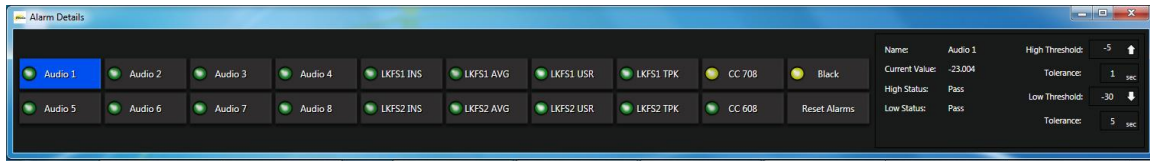


The Alarm Details window is designed to allow the operator to configure set points on the following parameters:


- Audio Levels for each channel
- Audio LKFS for up to two logical audio streams (up to six channels each)
- Closed Captioning detection
- Sequential Black Frame detection

Configuring Audio Level and LKFS Alarm Set Points

Audio Level and LKFS alarm set points can be configured by performing the following.

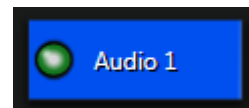

1. Click on the parameter you wish to configure such as
2. Set the High Threshold (in dBFS)
3. Set the Tolerance (how long the High Threshold must be exceeded in seconds)
4. Set the Low Threshold (in dBFS)
5. Set the Tolerance (how long the Low Threshold must be exceeded in seconds)

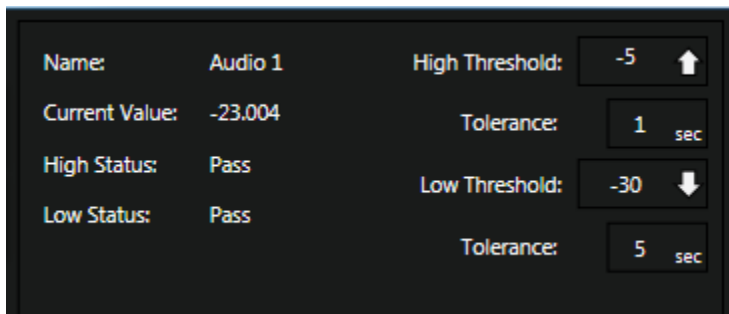


Once set the LED will indicate the current state of the alarm.

- Green = No Alarm
- Red = Alarm
- Yellow = Alarm History

Configuring Black and Closed Captioning Alarm Set Points

Black Frame detection and Closed Captioning Packet detection alarm set points can be configured by performing the following.


1. Select the parameter you wish to configure
2. Set the number of frames before an alarm is declared
3. Optionally, set the Mark-In and Mark-Out where you wish to monitor for this parameter. If no Mark-In and Mark-Out are set, then the entire file will be monitored.

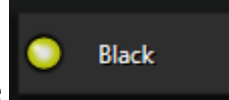

Name:	Black	Tolerance:	500 fr
Current Value:	True	In:	00:00:00:000
Current Status:	Pass	Out:	00:00:00:000

File Information/Parse


This feature will display information about the file in the list. Once opened you can select which file to show information about by selecting the drop down menu in the File Information/Parse window (see below).

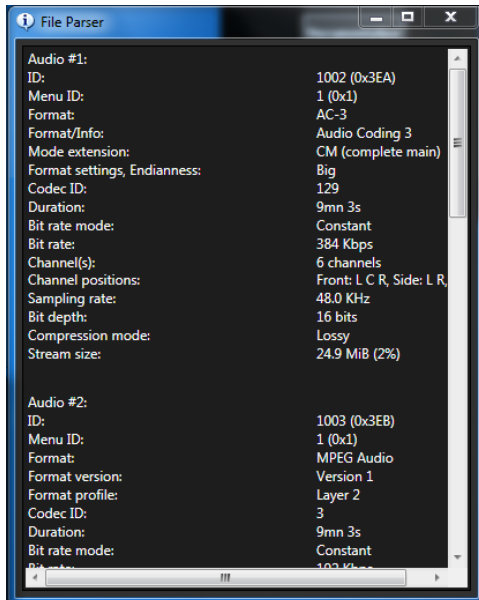

The types of information provided include:

- Type of wrapper
- Type of video compression
- Video resolution
- Chroma sampling
- Video bitrate
- GOP Structure
- Type of audio compression
- Audio sampling and bitrates
- Number of Audio Channels
- ATSC Closed Captioning information


Closed Captioning Display Window

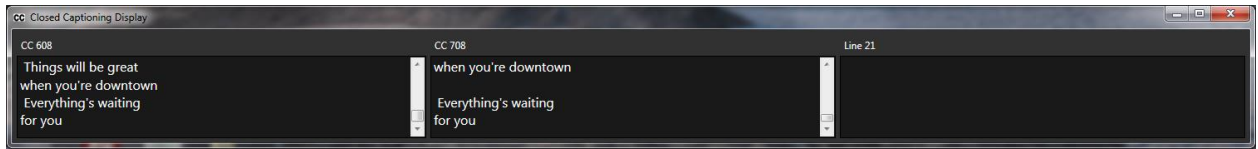

The Closed Captioning Display show 608, 708, and Line 21 closed captioning data while providing an unobstructed view of the video display and audio level meters during playback.

To Launch the CC viewer select the CC button, which is one of the Special Controls buttons on the front panel of the ArgoNavis user interface. Note that this window is launched automatically when the decoder application is launched

Playback Properties and Graphics Overlay Settings

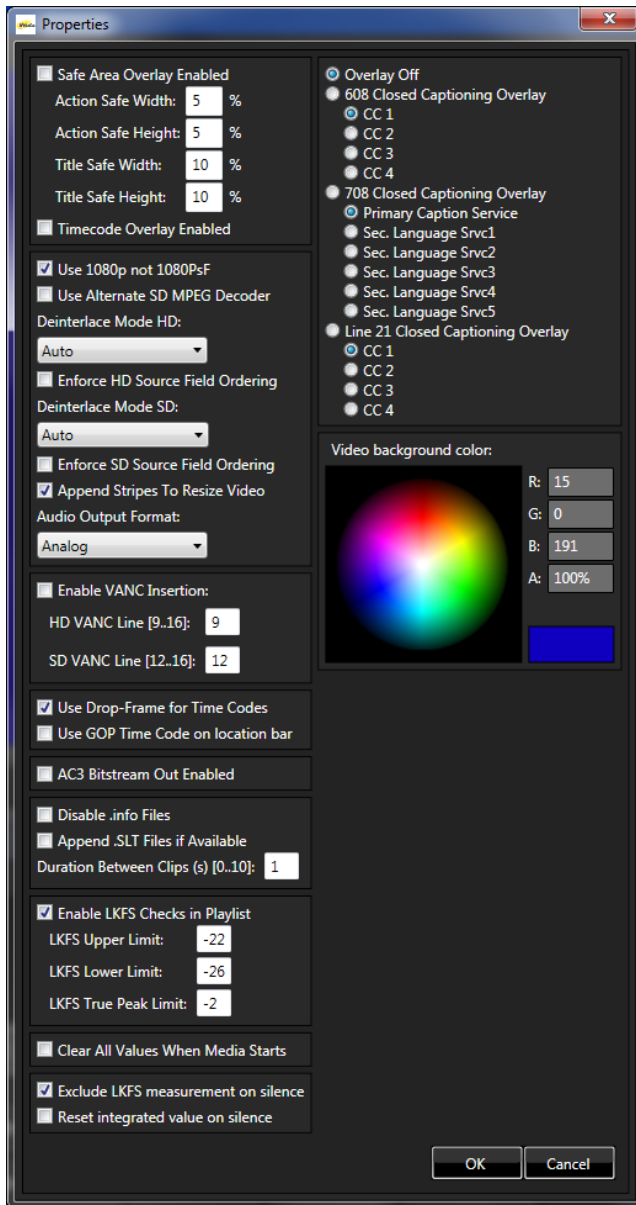

608 Captioning Overlay

The ArgoNavis can decode Line 21/608 closed captions and overlay them onto all video outputs as open captions. Select the '608 Closed Captioning Overlay' checkbox and then select the Service Type to display (CC 1 is default)

Note: No other graphics overlay options can be selected when 'Line 21 Closed Captioning Overlay' is enabled.

708 Captioning Overlay

The ArgoNavis can decode 708 closed captions and overlay them onto all video outputs as open captions. Select the '708 Captioning Overlay' checkbox and then select the DTV Service Type to display (Primary Caption Service is default)

Note: No other graphics overlay options can be selected when either 'Closed Captioning Overlay' option is enabled.

Video Background Color

This tool allows the user to set a background color for the local video (PC) renderer. This can be useful in viewing the differences between active and inactive video.

Note: The background color is only changed on the local video (PC) renderer. None of the 'decoder' outputs such as SDI, Component, etc. are affected.

Action\Title Safe Area Overlay

The ArgoNavis can provide a graphic overlay of the Action and Title Safe areas. These areas can be used to determine if video or graphics will be cutoff on CRT monitors.

By default these values are set to 5% and 15% respectively, but are user settable.

Note: Line 21 (608) and DTV (708) graphics overlay options cannot be selected when the Action\Title Safe Area Overlay is enabled.

Timecode Overlay

The ArgoNavis can provide a graphic overlay of the current Timecode while playing a file back

Note: Line 21 (608) and DTV (708) graphics overlay options cannot be selected when the Timecode Overlay is enabled.

Use 1080P not 1080PsF

When 'checked' this setting forces the physical output to 1080P. When not checked the physical output is forced to 1080PsF.

Use Alternate SD MPEG Decoder

When 'checked' this setting uses a different MPEG decoder design to perform decoding. This setting is 'Unchecked' by default. This setting provides an alternate decode platform which can be useful in certain troubleshooting or debugging scenarios.

Deinterlacing Mode HD

Selects which Deinterlacing filter to use. Options are:

1. Auto (Automatic deinterlace if picture type is field or MBAFF)
2. Weave (Do not deinterlace – output interleaved fields)
3. Vertical Filter Deinterlace (Vertical deinterlace)
4. Field Interpolation (Deinterlace by interpolation)
5. Rederer (No deinterlacing on the physical output)

Auto is the default setting.

Enforce Field Ordering for HD Source

This setting swaps the Field Ordering on the physical outputs and can be used to find 'Field Ordering' issues that result in a 'jittery' output. This setting should be used in conjunction with:

1. Deinterlace Mode HD set to 'Renderer'
2. Enable VANC Insertion 'Checked'

Deinterlacing Mode SD

Selects which Deinterlacing filter to use. Options are:

1. Auto (Automatic deinterlace if picture type is field or MBAFF)
2. Weave (Do not deinterlace – output interleaved fields)
3. Vertical Filter Deinterlace (Vertical deinterlace)
4. Field Interpolation (Deinterlace by interpolation)
5. Renderer (No deinterlacing on the physical output)

Auto is the default setting.

Enforce Field Ordering for SD Source

This setting swaps the Field Ordering on the physical outputs and can be used to find 'Field Ordering' issues that result in a 'jittery' output. This setting should be used in conjunction with:

1. Deinterlace Mode SD set to 'Renderer'
2. Enable VANC Insertion 'Checked'

Enable VANC Insertion

When 'checked' this 608/708 VANC data is inserted on the specified line.

HD VANC Line

Specifies the line to insert the CC data. Valid values are 9 through 16.

SD VANC Line

Specifies the line to insert the CC data. Valid values are 12 through 16.

Use Drop Frame for Timecodes

When 'checked' this drop frame timecodes are used for the trackbar and Time Code Overlay.

Use GOP Header Time Code on location bar

When 'checked' the GOP Header timecode is used on the trackbar. If 'unchecked' timecode starts from 00:00:00:00

AC3 Bitstream Out Enabled

When 'checked' this setting bypasses decoding AC-3 and outputs the AC-3 embedded in the SDI.

Disable .info Files

By default the decoder creates a file that contains the mpeg parameters of media file under test. This file is stored in the same location as the media file under test and is used to 'pre-configure' the decoder if the file is loaded into the player again. Creating and retaining this file is not required for decoder operations and can be disabled using this setting.

Append .SLT Files if Available

For advertisements or spots that have slate files associated with them (.SLT) this feature allows to the .SLT file to be loaded with the spot automatically.

Duration Between Clips

Sets the duration the decoder will wait between playback of clips in the playlist in seconds.

In 'Auto Detect' mode the decoder resets the physical outputs to match the timing and resolution of the file under test for each clip in the list. How long it takes for peripheral SDI/HDMI monitors to resync after the switch can vary by manufacturer. This setting allows you to extend the delay to allow more time for peripheral equipment to resync after each resolution change.

Enable LKFS Checks in the Playlist

This feature allows the decoder to launch a file based, faster than realtime process in background to analyze the loudness of media files loaded into the playlist per the ATSC A/85 CALM Act specification.

LKFS Upper Limit: Failure occurs above this value

LKFS Lower Limit: Failure occurs below this value

LKFS True Peak Limit: Failure occurs above this value

Results are displayed in the Playlist below the clip name. A green check mark indicates pass. A red X indicates fail.



Clear All Values When Media Starts

When checked the final Realtime LKFS values will persist until the next clip is played.

Exclude LKFS Measurement on Silence


When checked silence will not be included in the Realtime LKFS Integrated measurement.

Reset Integrated Value on Silence

When checked the Realtime LKFS value is reset whenever silence is encountered.

Exiting the Application

Under normal conditions, shutdown the application using the windows x button.
Under abnormal conditions, select the Soft Reset option on the Vela Toolbar. This will forcibly shutdown all Vela applications and threads and clear the programs from memory.

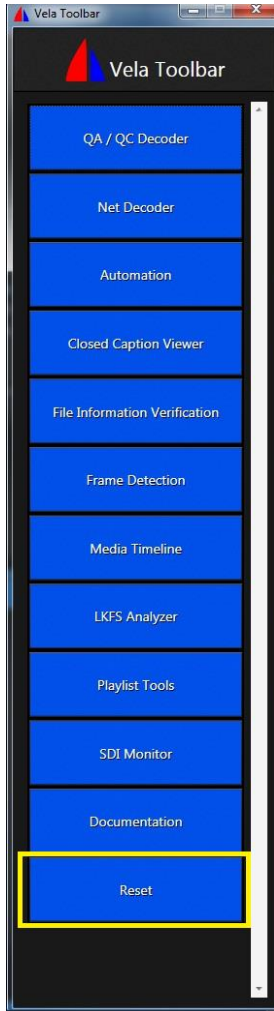



www.vela.com

5540 Rio Vista Drive
Clearwater, FL 33760-3107
727 507 5344

Copyright 2014 Vela Research LP. All rights reserved. Vela and PlayAdvantage are trademarks or registered trademarks of Vela Research LP.